


# Perfect 10 Hybrid Displays

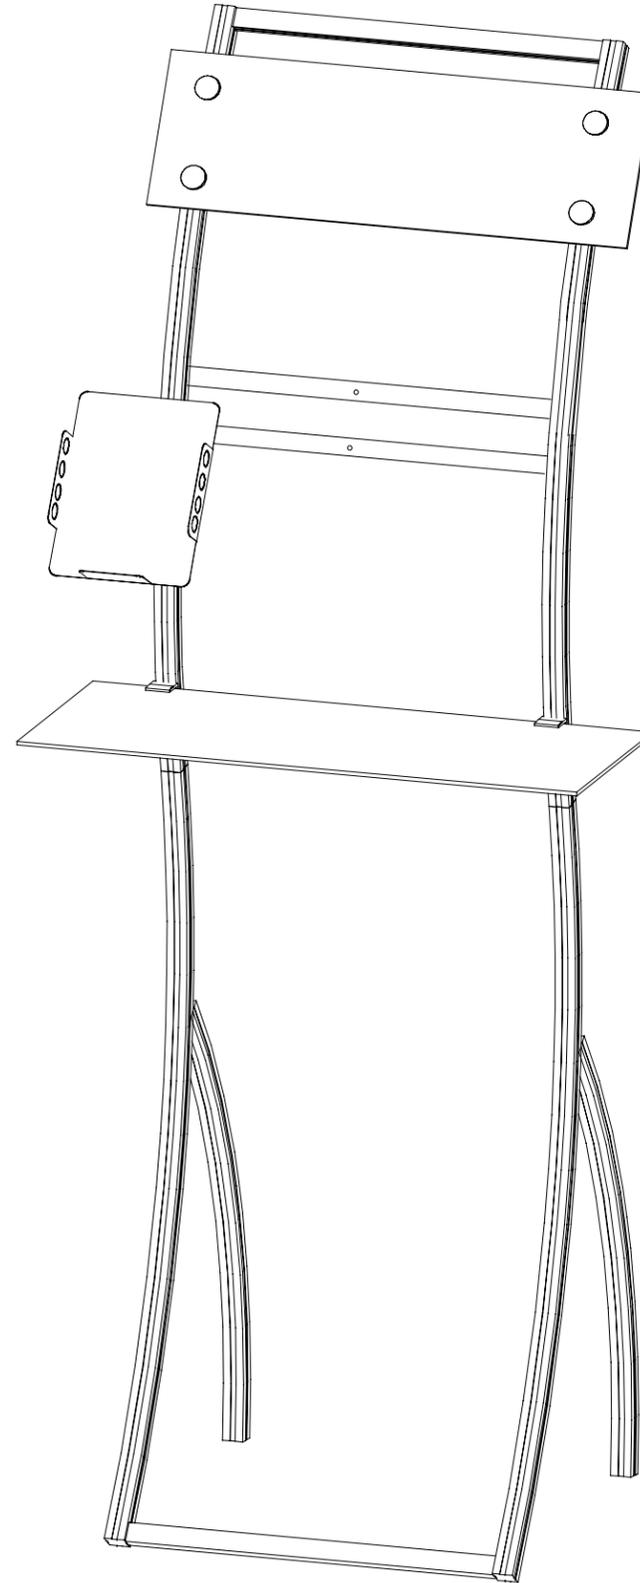

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100






Part Number	Qty for Step	Description
1	1	Left Leg Assembly
2	1	Right Leg Assembly
4	1	Upper Curved Vertical
5	2	23" w Horizontal
6	2	Monitor Mount Extrusion

Steps:

NOTE: Assembly may be easiest if assembled face down on floor then lifted upright.


- 1) Connect vertical extrusions [4] to leg assemblies [1 and 2] as shown.
- 2) Connect horizontal extrusions [5 and 6] between vertical assemblies by slightly tightening BLACK knobs on backside of extrusion.

NOTE: Make sure Velcro faces toward back and knobs face horizontally as shown in detail.

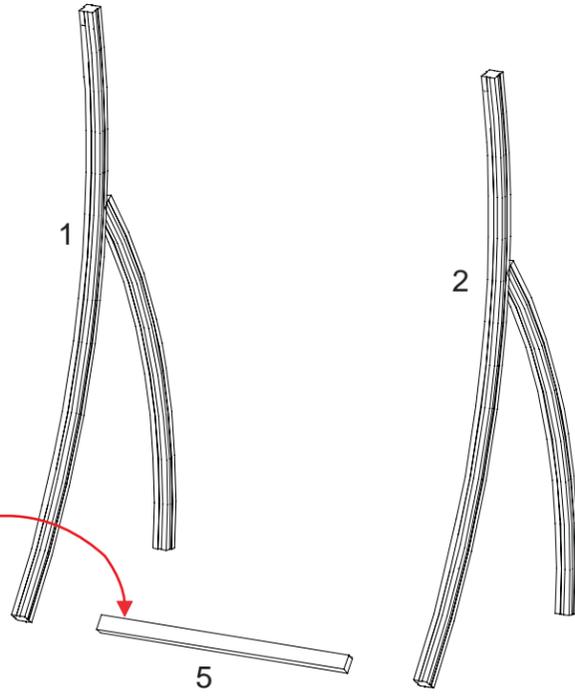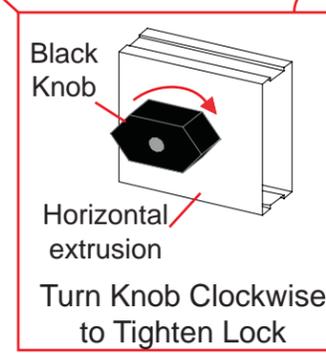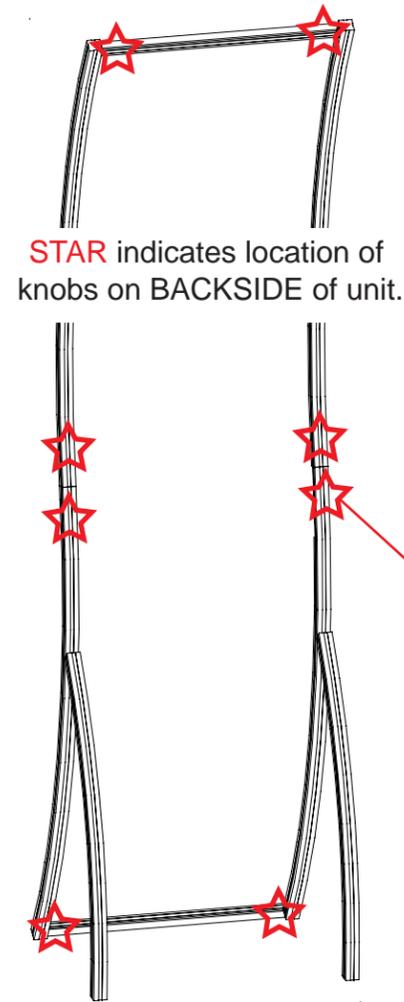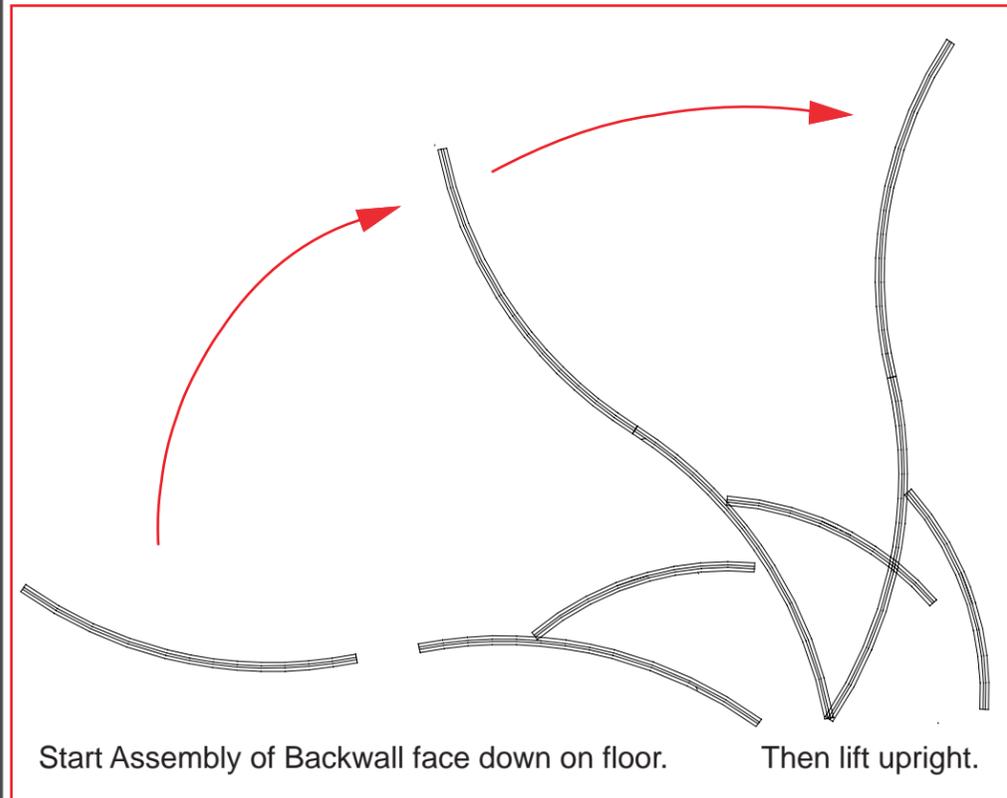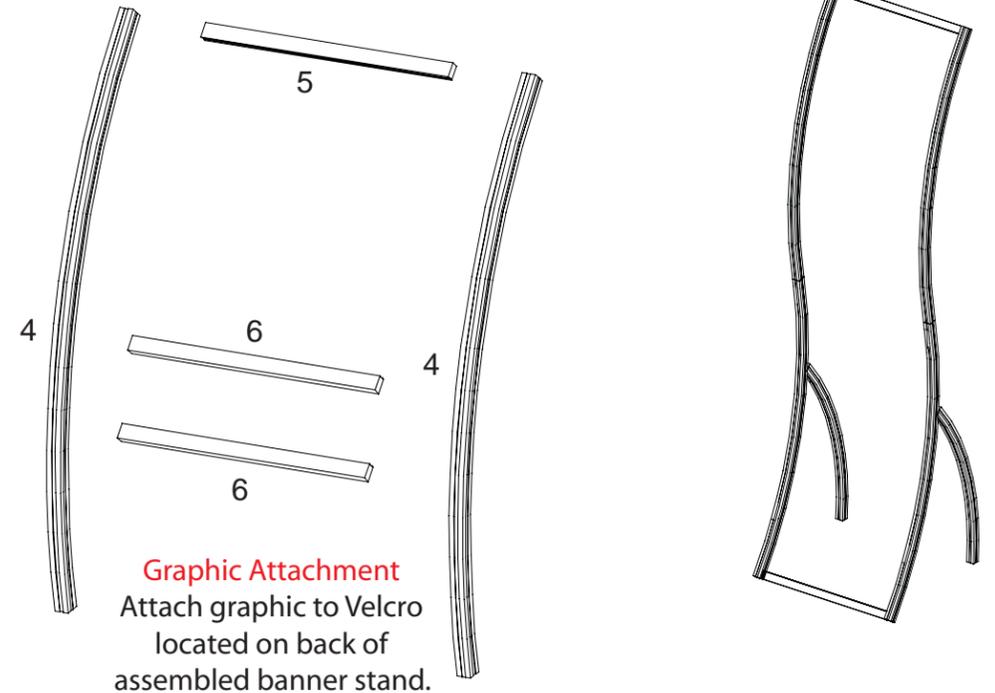

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**

Attach Header to Banner Station using standoff caps as shown.

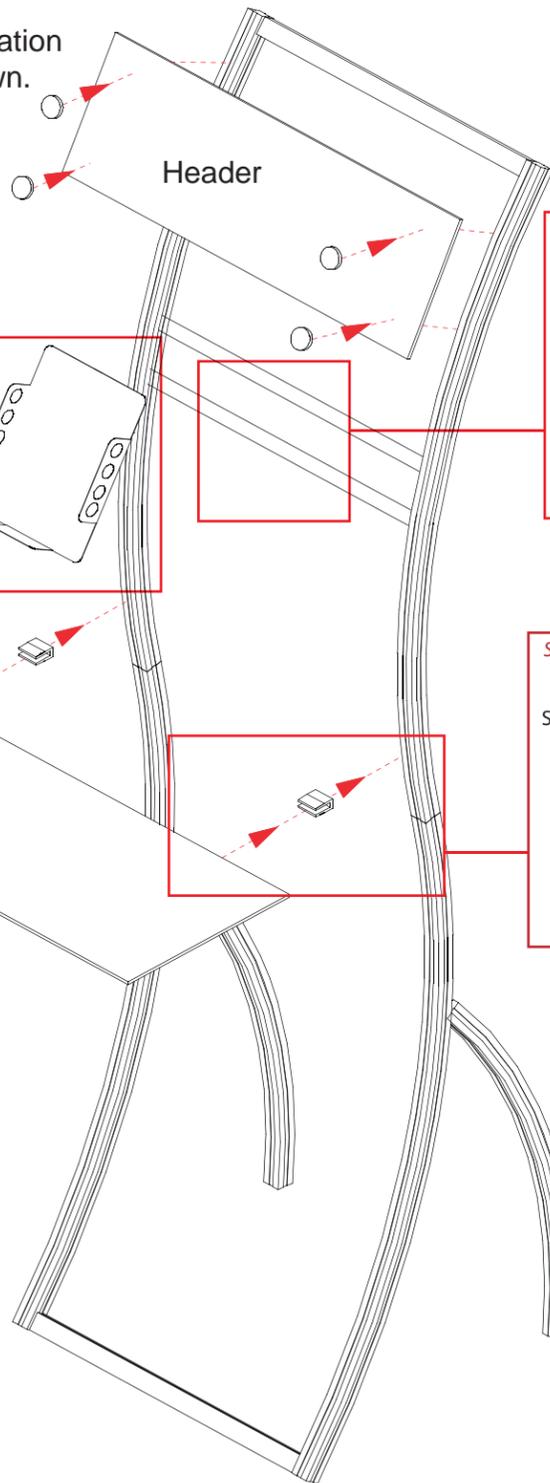

Connect Monitor Mount back plate to extrusions 6 then slide top plate attached to Monitor and tighten screws to secure.

extrusion 6

Monitor Back Plate

**Literature Rack Attachment**

Tighten Lock to Secure

Attach connector piece to rack as shown. Then connect assembled literature rack to vertical extrusion.

**Shelf Attachment**

Slide A10 Clamp into groove of square extrusion.

A10

When desired location is found, tighten set screw to secure.

Set-Screw

Tighten black plastic set screw to secure shelf in place.

Black Plastic Set-screw

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**