

Item	Qty.	Description
1	1	Left Leg Assembly
2	1	Right Leg Assembly
3	1	Hinged Horizontal
4	1	Hinged Horizontal

# Perfect 10 Hybrid Displays



**Steps:**

1) Attach lower and upper horizontal extrusions [3,4] between assemblies by slightly tightening BLACK knobs on backside of extrusion as shown.

NOTE 1: Make sure velcro faces toward back and knobs face horizontally as shown in detail.

NOTE 2: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion while turning knob until lock fully opens.

**\*\* Various Accessories Available \*\***

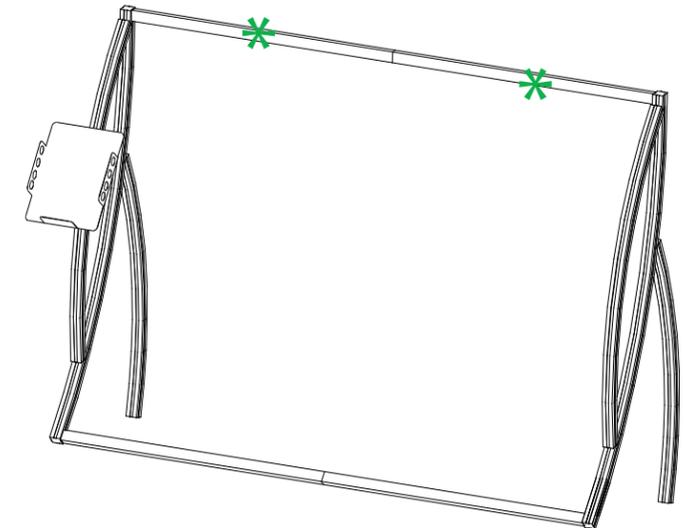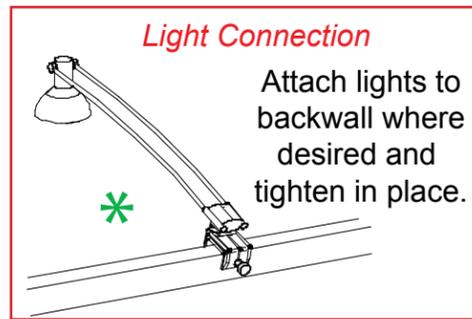


When assembled






NOTE: When assembling horizontals they should be placed approximately one inch from TOP and BOTTOM.



Rear View of Display



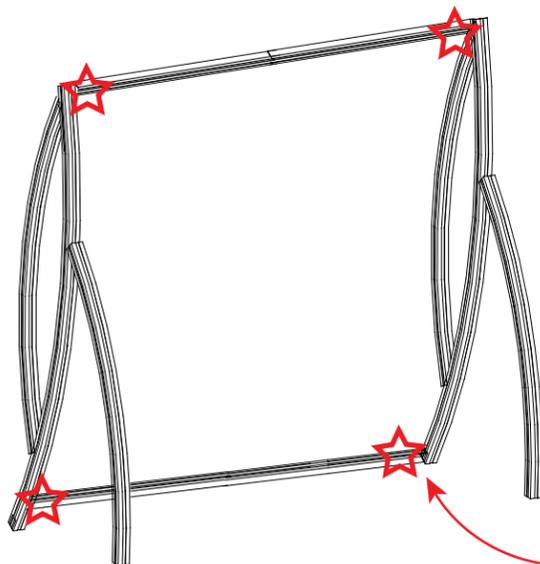


STAR indicates location of knobs on BACKSIDE of unit.

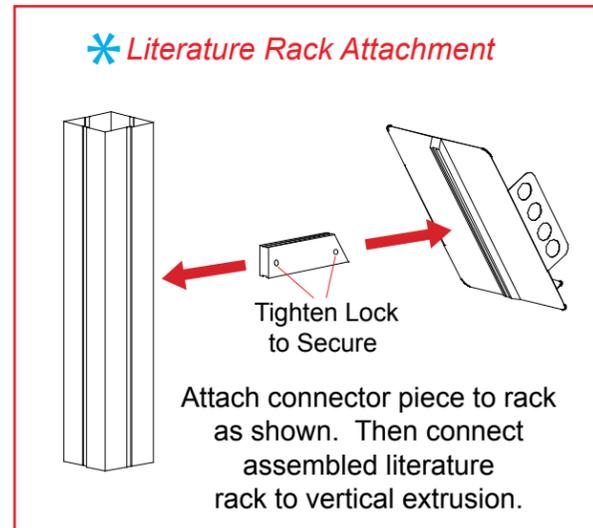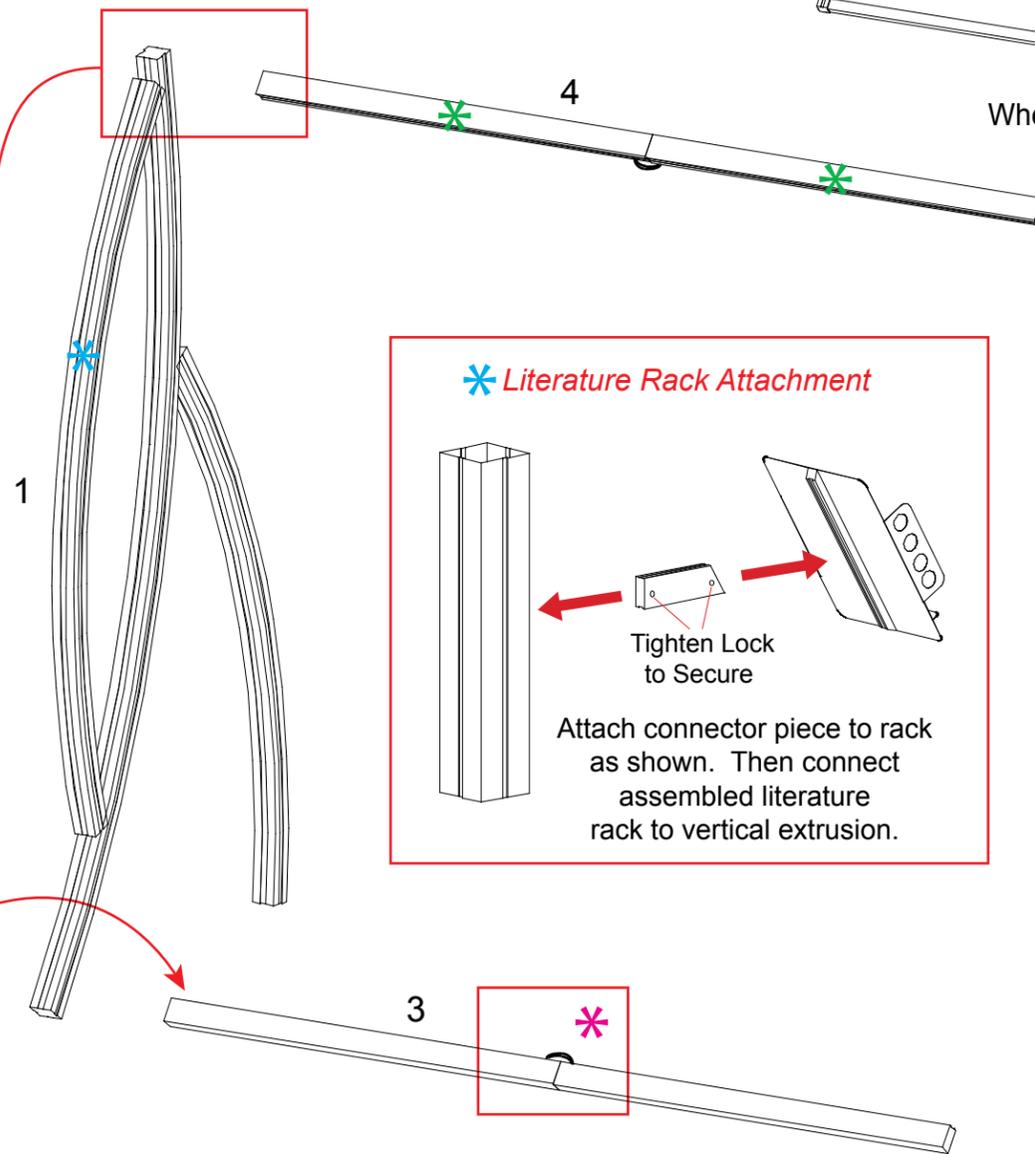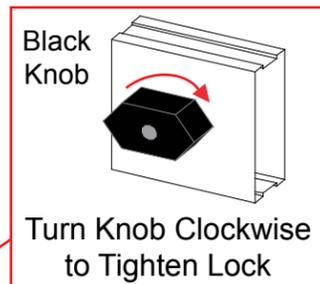

**WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING**

Top View of Each Level

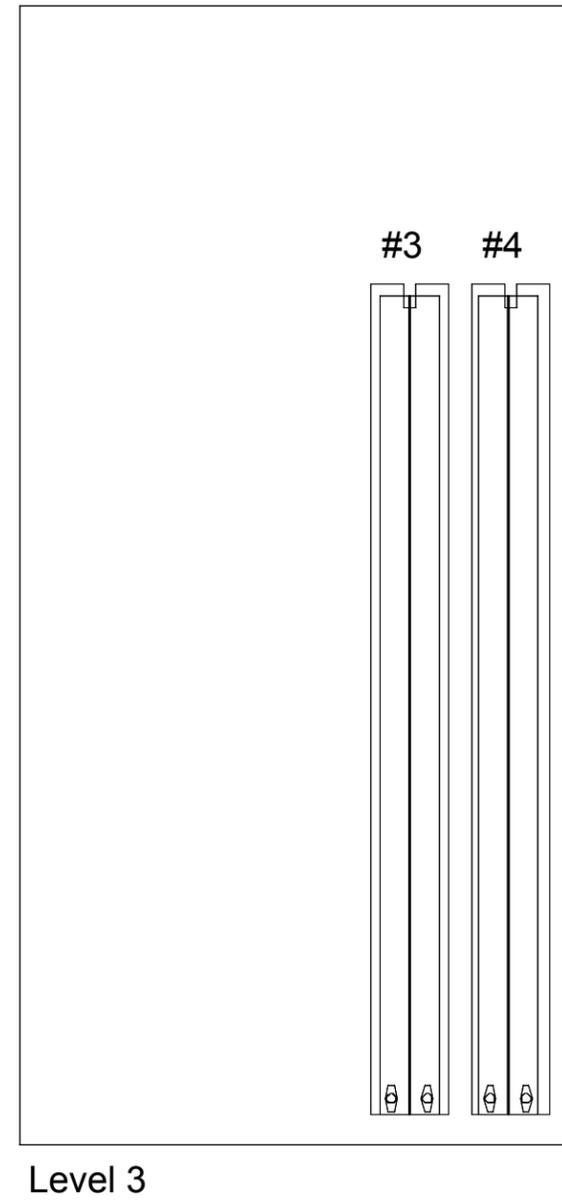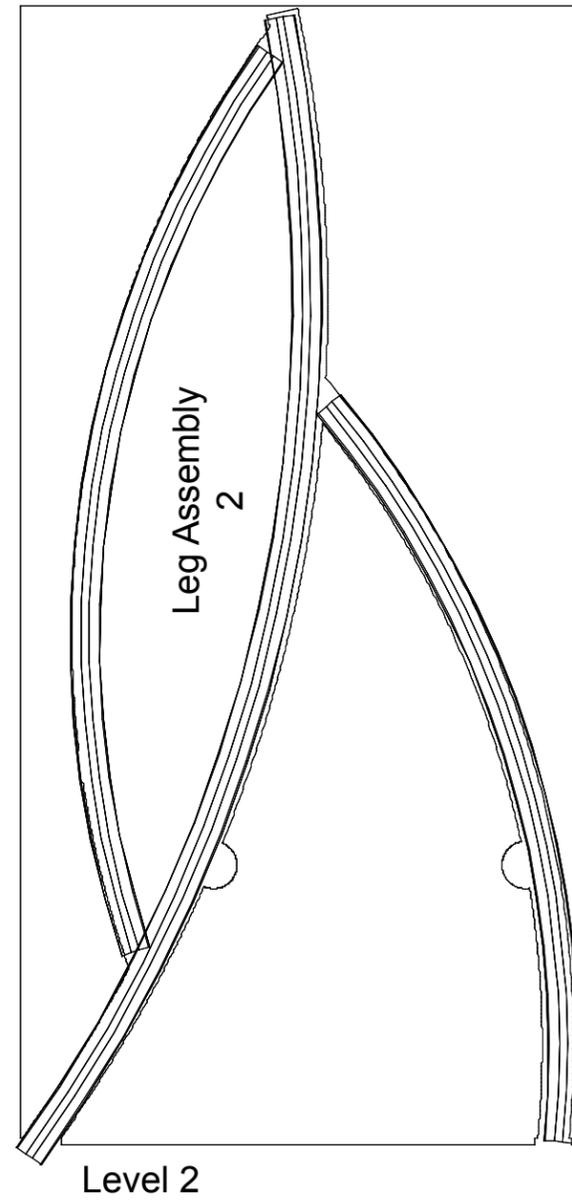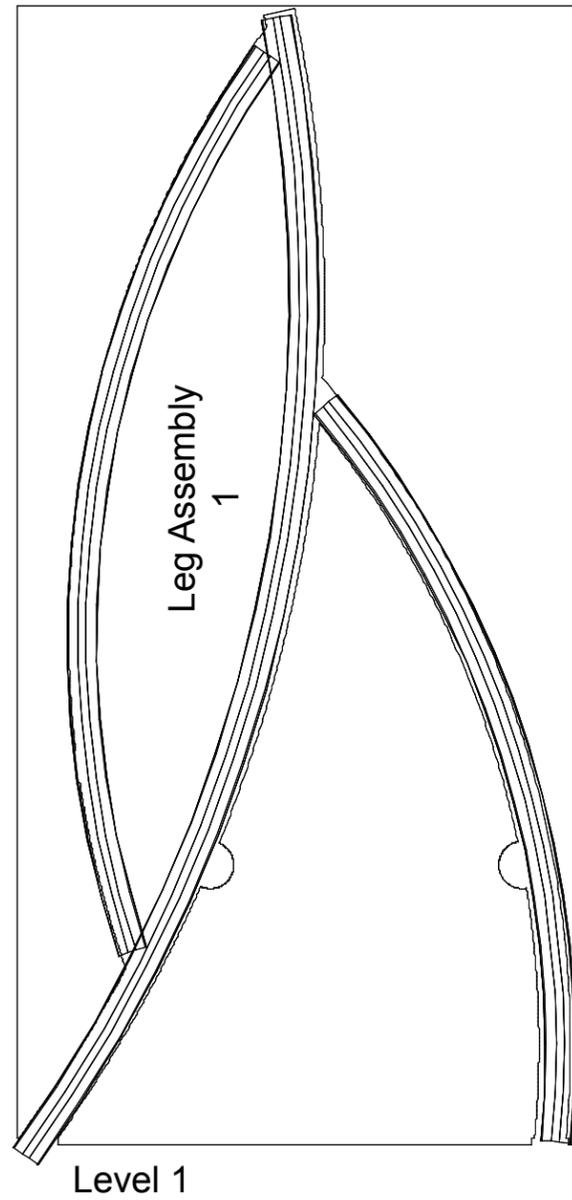

- Halogen Lights
- Graphics
- Setup Hardware

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING